

## DOW 995 Structural Wet Glaze System



Tape entire glass edge and frame edge to specific size needed.

Wipe untaped section with clean towel.



Shoot silicone into taped section. Enough to fill gap to slick into proper bead shape.


Tool/Slick into proper bead without a concave.





Remove tape carefully. Take care to not touch silicone.

Finished bead.

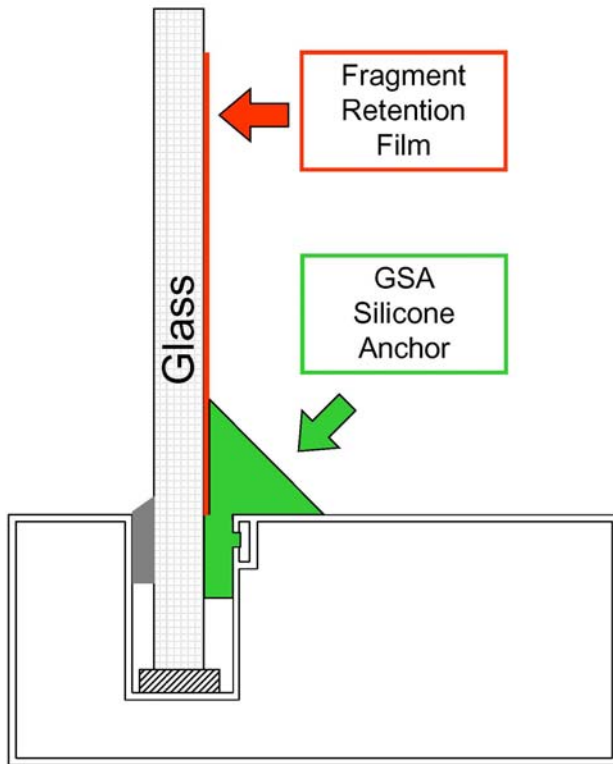

Wet Glaze Diagram